


Laydown Threading Shim Selection Guidelines

It is essential to select the correct shim to ensure thread quality and maximum tool life. These parameters are needed:

- Pitch
- Pitch diameter
- Number of starts
- Feed direction

NOTE: When considering method of thread cutting, the part's shape and stability and the flow of chips are determining factors in your decision.

Laydown Selection Chart

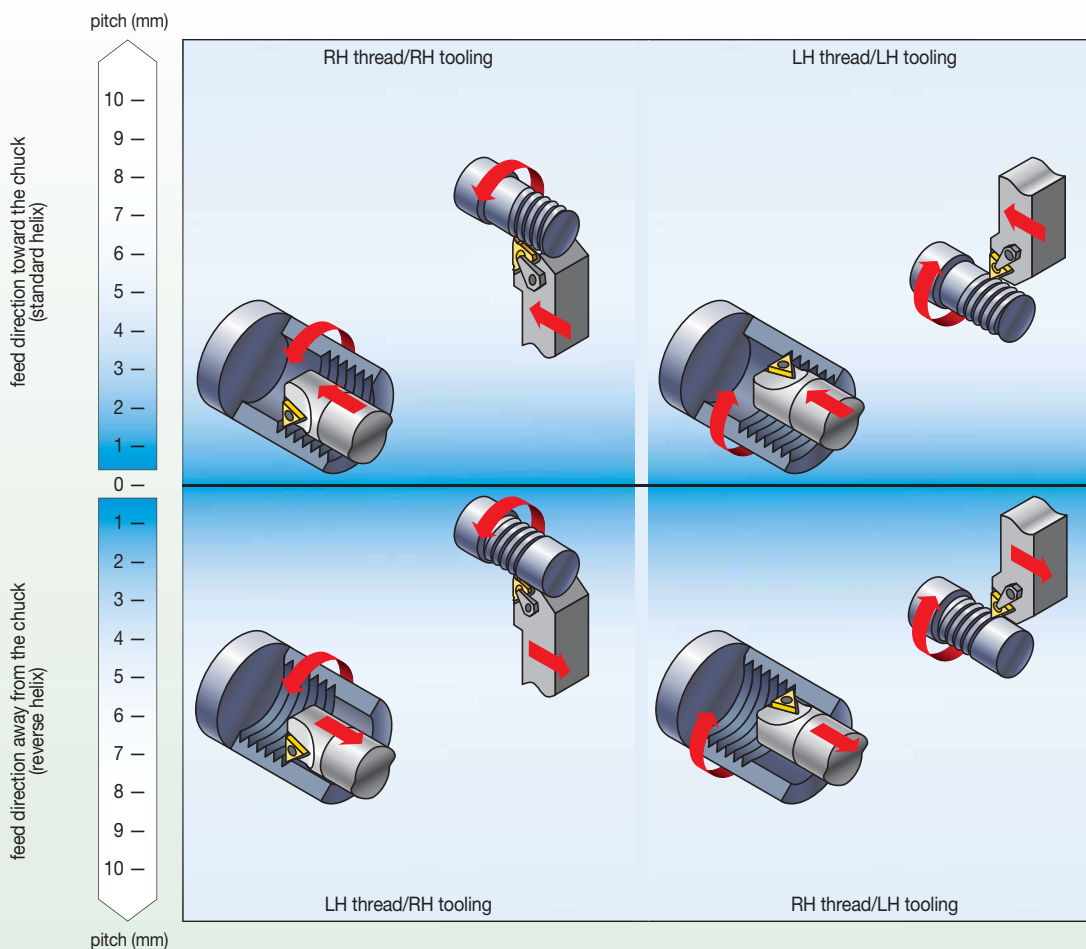

NOTE: For multi-start threads, use the lead value instead of the pitch.

Diagram of Thread Lead Angles

To calculate the lead angle of a given thread, use this formula:

$$\beta = \text{Arctan} \frac{P \cdot S}{\pi D_e}$$

β = thread lead angle
 D_e = effective pitch diameter of thread wear
 $P = 1/\text{TPI}$
 TPI = threads per inch
 S = number of starts
 single-start, lead = pitch
 multiple-start, lead = pitch (x) number of starts

All toolholders are designed with an inclination angle = 1.5°. When turning standard threads with a lead angle of 1-2°, this guarantees adequate clearance at the flanks of the insert's thread tooth. The thread lead angle and the required inclination angle of the insert are given by β . Cutting edge height is constant at every shim and insert combination. All toolholders are supplied with 1-1/2° lead angle.

